

# PUSH BUTTON SINGLE POLE SWITCHES

(as formerly manufactured by CASTELCO)



# **SWITCH**

TYPES	ORDER CODE
Push On / Push Off (OO) Make and break action	B100
Momentary Action (NO) Push to make, release to break e.g. Bell Push	B1NO
Momentary Action (NC) Push to break, release to make e.g. Door open, light on	B1NC

### **WIRING**

CABLE ENTRY	CLAMPING SCREW POSITION	ORDER CODE
Rear face	Long side of body	RL
Rear face	Short side of body	RS
Short side of body	Long side of body	SL
Mounting face	Long side of body	ML
Solder Tags (Long side of body)		ST

# **BUTTON COLOUR**

BUTTON	ORDER CODE
White	W
Cream	С
Black	В

# **FIXING RING**

ITEM	ORDER CODE
Long fixing ring, White (drawing overleaf)	6LW
Long fixing ring, Cream (drawing overleaf)	6LC
Short fixing ring, White (drawing overleaf)	6SW
Short fixing ring, Cream (drawing overleaf)	6SC

### STANDARD SWITCHES

All Omeg manufactured Castelco switches have a M10 metric threaded mounting bush and fixing ring.

### **WIRING**

Screwed terminal locations as shown overleaf (order code RL, see table opposite).

# **STANDARD COLOURS**


The switch body is white. The fixing ring and push button can be either cream or white.

NOTE: Switches with luminous buttons do not have luminous fixing rings.

# **ACCESSORIES**

ITEM	ORDER CODE
Fibre washer (Ø 15.9 x 1.2mm thick)	44
Hex. lock nut (M10)	65

### ORDERING CODES

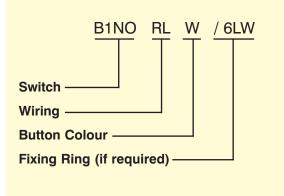


Example above: B1NORLW/6LW is a push button single pole switch, momentary action, contacts normally open, standard RL wiring, with a white button and a long white fixing ring.


# PUSH BUTTON SINGLE POLE SWITCHES

(as formerly manufactured by CASTELCO)

### STANDARD UNITS

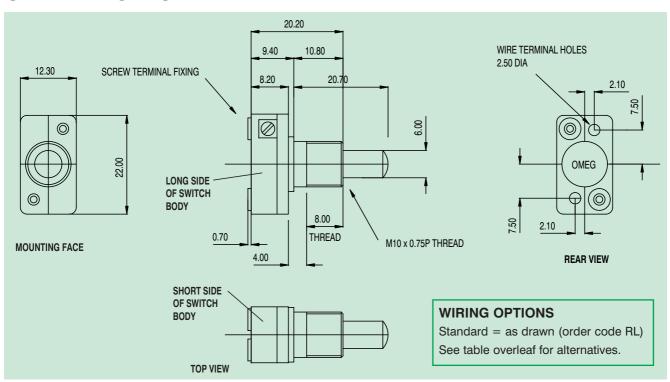

# **FIXING RINGS**

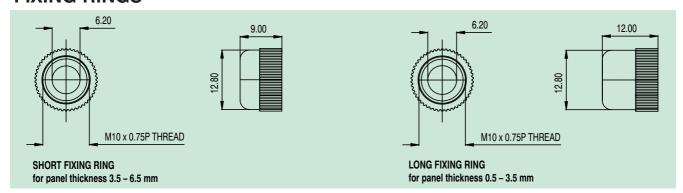

### **GLOSSARY OF SWITCH TERMINOLOGY**

### SINGLE POLE (SP or 1S)

One circuit that is turned 'on' and then 'off' with each actuation. This action can be momentary.

### **DOUBLE POLE (DP or 2S)**

Two independent circuits that are turned 'on' and then 'off' with each actuation. This action can be momentary.

### TWO-CIRCUIT CHANGEOVER (CH)

Make and break, reversed action.

When the switch is actuated, circuit one turns 'on' and circuit two turns 'off'.

When the switch is actuated again the two circuits are reversed, circuit one turns 'off' and circuit two turns 'on'.

# PUSH ON / PUSH OFF (OO)

Each action returns the switch to the previous state and it stays in that state. However, unlike a switch with a lever (or similar external indication) you cannot know what state the switch is in until it is connected to an electrical circuit.

### **MOMENTARY ACTION**

NC - normally closed 'Push to break, release to make' e.g. bulb to light when a Door is opened.

NO - normally open 'Push to make, release to break' e.g. push button Bell action.

(Note: The 'Normal' position is when the switch is at rest i.e. NOT actuated).

